

鼻毛器书176x126mm 正面


How to cleaning:

Clean the trimmer after each use.

- ※ Before cleaning, make sure that the battery cover and the body are firmly combined to prevent water from entering the body.
- ※ Wash the head of the trimmer under the running water, but do not immerse the entire trimmer completely the water.

Cleaning the blade head:

- ※ Hold the cutting head between thumb and forefinger and rotate counterclockwise to remove the cutting head.
- ※ Turn the entire blade upside down and place it under the tap to rinse. (please do not remove the inner knife to prevent the blade from damaging the skin).
- ※ Gently dry the knife head, rotate clockwise, reinstall the cutting head, and then use soft cloth dry the water stains on the unit surface.
- ※ Put the protect cover in and keep it safe. (you can also clean the hair on the inside of the blade head with the attached brush).

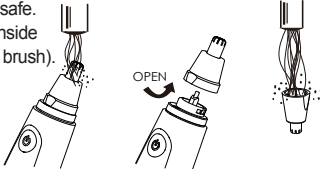

CAUTION

- ※ This trimmer is designed for cutting nose and ear hair; It is intended for personal use and not intended for commercial use.
- ※ May be a danger to children and should be kept out of reach of children.
- ※ This trimmer is designed to trim the nose and ear hairs. Do not attempt to use it for any other purpose.

Other potential risks of injury

- ※ Never insert the trimmer deeper than 0.5cm into your ear or nose as you may injure your eardrum or the mucous membrane in your nose.
- ※ Be sure the cutting head is firmly in place during use.


Caution - Damage to the trimmer

- ※ When cleaning the trimmer, be sure that the battery cover is tightly closed.
- ※ Never immerse the unit completely in water.
- ※ Turn the trimmer off after each use and replace the protective cover.
- ※ Always remove a dead battery from the trimmer immediately because It may leak and cause damage.

STYLECRAFT™

SCHNOZZLE — MICRO NOSE AND EAR TRIMMER

Battery Operated
Fully Washable

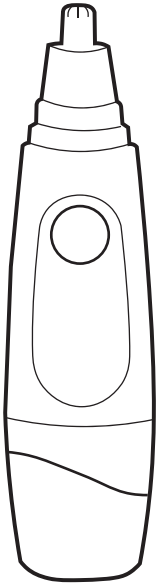

Before operating this trimmer, please read these instructions completely.

MODEL #: SCNETB

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS & SAFETY GUIDE

反面

Stylecraft LLC. ("we", "us", or "our") warrants product against defects in materials and workmanship for one (1) year from original purchase date ("Warranty Period"). If you cannot prove original purchase date, Warranty Period runs one (1) year from date of product manufacture. If we receive a valid claim, we will repair or replace with product of equal or greater value at our option.

This Warranty does not cover normal wear and tear such as shorts in the power supply cord or plug, or excessive product build-up on plates or scratched or damaged plates or damage due to accident, misuse or abuse such as: dropping (broken housing, broken hinges, loose plates, rattling noise, etc.), wrong voltage supply, or neglect in safety precautions; or tampering such as repair or attempted repair by unauthorized person, or use of unauthorized attachments.

What to do if you have a claim: If the product fails to operate properly under normal use because of a covered defect: (1) within 60 days from purchase, simply return to place of purchase with valid, dated receipt for a no charge replacement, or (2) after 60 days and within the Warranty Period, please call (888) 864-6409 for further directions on how to send back to STYLECRAFT LLC. for repair or replacement (you pay \$14.95 postage and handling charges). You must properly package product against possible damage. We are not responsible for products lost or damaged in transit.

IMPORTANT: Do not send cash. Be sure to enclose a note describing the problem and proof of original purchase date. Further instructions and return address will be provided for the claim process when you call our service center at (888) 864-6409 or email customerservice@stylecraftus.com.

 
TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES AND CONDITIONS SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. WE SPECIFICALLY DISCLAIM ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF WE CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN TO THE EXTENT WE CANNOT DISCLAIM WARRANTIES, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL EXPIRE ON EXPIRATION OF THE WARRANTY PERIOD. WE EXPRESSLY EXCLUDE, AND WE WILL NOT PAY, CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OF ANY WARRANTY, AND WE ASSUME NO RESPONSIBILITIES FOR YOUR LOSS OF USE OF THE PRODUCT, OR FOR ANY OTHER INCONVENIENCE OR CONSEQUENTIAL EXPENSE.

YOUR LEGAL RIGHTS: Some countries, states, provinces and/or jurisdictions do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

If you have questions regarding warranty, you may reach the service center at (888) 864-6409 or customerservice@stylecraftus.com.

STYLECRAFT LLC. 935F NW 31st Avenue, Pompano Beach, FL 33069


General description:

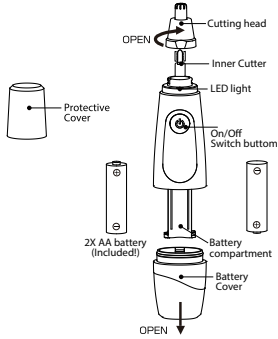

How to insert the batteries:

The unit works with two 1.5V AA batteries, to use an alkaline batteries.

 - ※ First open the battery cover back and remove it, using a little force.
- ※ According to the direction of the figure, put two AA batteries on the left and right sides, and be sure to pay attention to the battery direction.
- ※ Replace the battery cover to the unit upwards, regardless of the direction is ok.

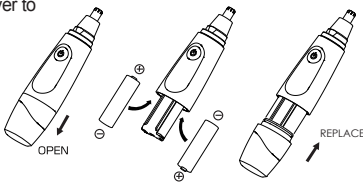

How to use:

- ※ Remove the protective cover.
- ※ To switch on the trimmer, press the ON/OFF switch.

Trimming the nose hair:

Switch on the trimmer and guide it carefully in the front area of the nostrils. Remove hair through careful, circular movements of the trimmer.



Trimming the ear hair:

Switch on the trimmer and guide it carefully into the outer parts of your ear. guide the trimmer carefully along areas where hair is seen on the ear.

