

STYLECRAFT™

 
 
 
ABSOLUTE
Zero
FORGED

USER MANUAL
MANUAL DE USUARIO

WARRANTY
GARANTÍA



STYLECRAFT™

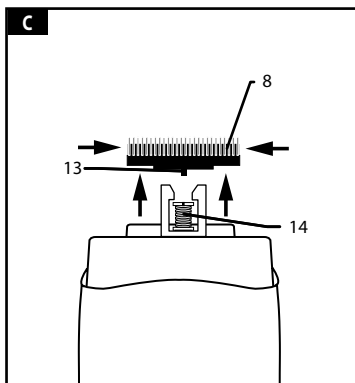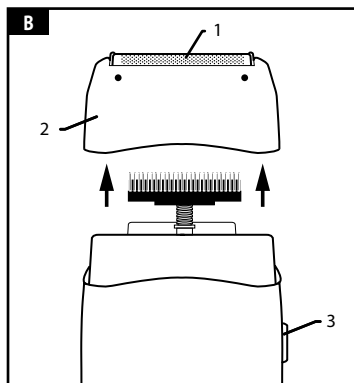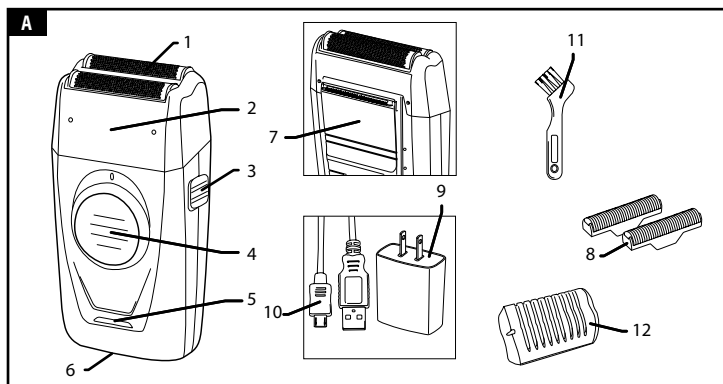

CAREFULLY READ ALL INSTRUCTIONS BEFORE USING APPLIANCE

Professional razor

EXPLANATION OF SYMBOLS



Our products comply with the directives that refer to EC marking.



An appliance is classified as class III when the protection against electrocution is guaranteed by the fact that the appliance does not contain voltages greater than the Safety Extra-Low Voltage (SELV). This appliance is powered either by a battery or an SELV transformer. Class III appliances do not require grounding.



This symbol indicates that the product meets the requirements of the new directives introduced so as to protect the environment and must be disposed of appropriately at the end of its life cycle. Request information from the local Authorities about the areas dedicated to waste disposal.



This symbol, generally together with the description, informs the user that there are important operations and instructions to be read.



DO NOT IMMERSE THE PRODUCT IN WATER OR OTHER LIQUIDS.
ALWAYS KEEP AWAY FROM WATER.

All the figures and parts detailed in them are shown on page 2 of this manual; the instructions that follow provide a part reference and the number of the figure, e.g.: 1 (fig.A).

GENERAL SAFETY WARNINGS



To avoid damage and dangers due to improper use, carefully follow the instructions for use and keep them in a safe place. If the product is handed over to a third party also provide the instruction booklet.



Do not use near flammable gases or other material (petrol, spray...)



Do not use the product with different cord from the one supplied. Furthermore, do not use the cord supplied to charge other products.



The rechargeable battery must only be used with this device. Do not use the battery with other products. Do not charge the battery after it has been removed from the product.

- Do not throw the battery in fire or heat it.
- Do not strike, disassemble, modify or perforate with a nail.
- Do not let the positive and negative contacts of the battery come into contact with each other through metal objects.
- Do not charge, use or leave the battery in places where it is exposed to high temperatures such as direct sunlight or near other heat sources.
- Do not remove the external film.



Proceed as follows if fluid leaks from the battery. Do not touch the battery with bare hands.

- If it comes into contact with the eyes, the battery liquid can cause blindness. Do not rub your eyes. Wash immediately with clean water and consult a physician.
- If it comes into contact with your skin or clothes, the battery liquid can cause inflammation or injuries. Wash away immediately with clean water and consult a physician.

UNPACKING AND INSPECTING THE PRODUCT

Remove the product from its packaging and make sure it is intact and has no visible signs of damage caused during transport.

In case of doubt, do not use the appliance and contact Customer Service.



ATTENTION! DANGER FOR CHILDREN.

The packaging materials (plastic bags, polystyrene foam, etc.) must not be left within reach of children as they are potential sources of danger.

ELECTRICAL SAFETY PRECAUTIONS

Using electrical appliances requires compliance with some basic regulations.



WARNING: do not use or store this appliance close to bathtubs, sinks or other containers that hold water or other liquids!



**Never place the appliance in water or other liquid!
Do not touch the appliance if it has fallen into any liquid and unplug immediately.**

In particular:

- never touch the appliance with wet or damp hands or feet;
- do not use the appliance with bare feet;
- do not expose the appliance to the elements (rain, sun, etc.);
- always remove the plug from the socket without pulling on the cord.
- do not use the product if the cord or other parts are damaged. If the power cord is damaged it must be replaced by the manufacturer.

- further protection is provided with the integration, in the home electric circuit, of a fault current protection device with a nominal trigger current no greater than 30mA.
- The safety of these electrical appliances conforms to known technical rules and to the laws regarding the safety of electrical appliances.
- Always unplug this appliance immediately after using.
- Place the product on a flat, stable surface, away from sources of heat.

GENERAL USE WARNINGS

Refer to the outer packaging and the specifications on the data plate affixed to the product itself for the relevant technical specifications.



INCORRECT USE:

Use this appliance only for its intended purpose, do not use with wigs, animal fur or with any material other than human hair. This shaver is ideal for trimming hair and beard. The manufacturer declines all liability concerning misuse of the appliance.



Do not wind the power adapter cable around the adapter to avoid damage and any risks.



During charging and use, the appliance may become hot; this is normal.



Do not insert or drop any object in any opening.

- Make sure that the outlet voltage matches the one shown on the technical data plate on the appliance and on the power adaptor.
- Keep out of reach of children. Children must not play with the appliance.
- To guarantee the proper and safe functioning, should the device fall or impact violently, have it checked at an authorised customer service center.
- Use, charge and store the appliance at a temperature between 5 °C and 40 °C.



This appliance is designed for professional use in commercial areas.

DESCRIPTION OF THE APPLIANCE AND ITS ACCESSORIES

Make sure your appliance is provided with the correct accessories (fig. A).

- 1 – Foils
- 2 – Head
- 3 – Head release button
- 4 – ON-OFF switch
- 5 – LED
- 6 – Power supply cable connection (not visible in the image)
- 7 – Trimmer
- 8 – Cutter
- 9 – Cord with USB mini connection
- 10 – Power supply/charge cable
- 11 – Brush
- 12 – Protective cap

CHARGING THE APPLIANCE



This appliance can be used on battery power or connected directly to the power supply.



Do not recharge the appliance if the ambient temperature is below 5°C or above 40°C.

Do not completely discharge the battery in case you wish to use the appliance with the power supply cable inserted.

- To charge the appliance, use the supplied cord(9) or cable(10) only, connect to a USB socket.
- Insert the cord(9) in the power socket.
- Check that the appliance is off and that the switch(4) is in position “0”.
- Connect the power supply cable(10) to the appliance(6). The red LED(5) will light up.
- When charging is completed, the LED(6) will turn green.
- Disconnect the appliance from the cable(10).

The appliance battery is supplied not charged. Before the first use, it is recommended to charge it completely (about 2 hours).

Recommendations for preserving battery life:

- Do not charge the appliance every day.
- Do not charge the appliance for longer than the recommended time; overcharging reduces the life of the rechargeable batteries.



Fully charge the appliance at least once a year.



Do not try to change the batteries yourself.

USE



Do not use the appliance if the foils (1), head (2) or cutters (8) are damaged. RISK OF INJURY



Do not apply directly on the skin with imperfections (such as swelling, injury or pimples).



Never use the appliance without the head (2) inserted



Do not use the appliance on wet hair.

- Check that the appliance is clean and dry.
- Remove the protective cap(12).
- Check that the foils, head and cutters are not damaged. Replace any damaged parts.
- Make sure that the battery is charged.
- Turn on the appliance by moving the switch(4) to position "1".
- Gently shave, proceeding against growth, stretching the skin. For a better result, we recommend tilting the appliance so that both foils(1) are in contact with the skin.
- Turn off the appliance by moving the switch(4) to position "0".
- After use, store the appliance in a dry and safe place.

If the battery discharges during use, connect the appliance to the power using the appropriate cable (10) and cord (9).

Using the "trimmer"

- Check that the appliance is clean and dry.
- Remove the protective cap(12).
- Lift the Trimmer(7) pushing it upwards until it engages.
- Turn on the appliance by moving the switch(4) to position "1".
- Place the Trimmer blades near the hair and shave gently.
- Turn off the appliance by moving the switch(4) to position "0".
- Lower the Trimmer(7) pushing it downwards until it engages.

MAINTENANCE



In case of malfunction or damage to the appliance or a part of it, the appliance must be analyzed by the manufacturer. The user must not disassemble the device him/herself.

GENERAL CLEANING

It is recommended to clean daily or after every use.

Always disconnect the power cord from the socket before cleaning.



Avoid all risk of electric shock by not cleaning the appliance with water and do not immerse it in water.



Do not use abrasive solutions or concentrated detergents.

- Clean the exterior with a soft cloth or slightly damp cloth.
- After use, make sure that all parts are completely dry.

Head (2) removal and blade cleaning - Figure B

- Check that the appliance is off and disconnect it from the power.
- Press the unlock button of the foil head(3).
- Lift the foil head to disengage it.
- To clean the cutters(8), use the appropriate brush supplied (11 fig. A).
- To reinsert the head, press it downwards firstly engaging the left side and then the right side.

The foils (1) are delicate: take care not to damage them during cleaning. We recommend to gently blow on them or clean them with soap and water, after having disengaged the head. Check that the plates are completely dry before reinserting the head.

Take care not to drop the head.

Cutter cleaning - Figure C

- Check that the appliance is off and disconnect it from the power mains.
- Remove the head as shown in the previous paragraph.
- Gently grasp the cutters(8) from both sides and pull upwards to disengage it from the support(14).
- Grasp the new cutters from both sides and align the central pin(13) with the notch in the guide of the razor(14) and push down firmly until it snaps into place.
- Reinsert the head(2). Fig. A

Failure to service and clean the appliance is considered as "FAILURE TO COMPLY WITH THE INSTRUCTIONS FOR USE", therefore, the warranty will be automatically rendered null and void.

DISPOSAL



The product packaging is made of recyclable materials. Separate the parts according to their type and dispose of them in accordance with applicable laws on the environmental protection.

Disposing of the battery and power adapter.

- Turn off the appliance.
- Remove the battery from its compartment.



Do not dispose of the batteries and/or power adapter with normal domestic waste.



This appliance contains LI-PO (Lithium) type rechargeable batteries. The end user is responsible for disposing of the batteries at a special waste collection center.

The batteries and power adapters are collected free of charge at collection points set up by your local council or by any battery retailer.

By doing this, you not only comply with the law, but also help protect our environment.



ATTENTION! Do not reconnect the appliance to the power supply once the batteries have been removed.

WARRANTY INFORMATION

ONE (1) YEAR LIMITED WARRANTY: USA AND CANADA

StyleCraft LLC. ("we", "us", or "our") warrants product against defects in materials and workmanship for one (1) year from original purchase date ("Warranty Period"). If you cannot prove original purchase date, Warranty Period runs one (1) year from date of product manufacture. If we receive a valid claim, we will repair or replace with product of equal or greater value at our option.

This Warranty does not cover normal wear and tear such as shorts in the power supply cord or plug, or excessive product build-up or damage due to accident, misuse or abuse such as: dropping (broken housing, broken hinges, rattling noise, vibration, etc.), wrong voltage supply, or neglect in safety precautions; or tampering such as repair or attempted repair by unauthorized person, or use of unauthorized attachments.

What to do if you have a claim: If the product fails to operate properly under normal use because of a covered defect; (1) within 90 days from purchase, simply return to place of purchase with valid, dated receipt for a no charge replacement, or (2) after 90 days and within the Warranty Period, please call (888) 864-6409 or email customerservice@stylecraftus.com for further directions on how to send back to us for repair or replacement (postage and handling charges of \$24.95 will apply). Please properly package product against possible damage. We are not responsible for products lost or damaged in transit.

IMPORTANT: Do not send cash. Be sure to enclose a note describing the problem and proof of original purchase date. Further instructions and return address will be provided for the claim process when you call our service center at (888) 864-6409 or email customerservice@stylecraftus.com.

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES AND CONDITIONS SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. WE SPECIFICALLY DISCLAIM ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF WE CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN TO THE EXTENT WE CANNOT DISCLAIM WARRANTIES, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL EXPIRE ON EXPIRATION OF THE WARRANTY PERIOD. WE EXPRESSLY EXCLUDE, AND WE WILL NOT PAY, CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OF ANY WARRANTY, AND WE ASSUME NO RESPONSIBILITIES FOR YOUR LOSS OF USE OF THE PRODUCT, OR FOR ANY OTHER INCONVENIENCE OR CONSEQUENTIAL EXPENSE.

YOUR LEGAL RIGHTS: Some countries, states, provinces and/or jurisdictions do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

If you have questions regarding warranty, you may reach the service center at (888) 864-6409. StyleCraft, 935F NW 31st Avenue, Pompano Beach, FL 33069

Designation Designación	HC HC	Explanation Significado	Hair clipper Cortapelos
----------------------------	----------	----------------------------	----------------------------

model (modelo)	SCAZFF
vibrations (vibraciones)	< 2,5 m/s ²
sound pressure level (nivel presión sonora)	< 70 dB (A)

WARRANTY - GARANTÍA

Model - Modelo

Serial No. - N.º de serie

Date of purchase - Fecha de compra

Proof of Purchase - Recibo de la Compra

Proof is the date shown on the receipt/invoice.
Da fe la fecha indicada en el comprobante/factura.

FORGED

ABSOLUTE
Zero
FORGED

STYLECRAFT™

WWW.STYLECRAFTUS.COM | FOLLOW US:    @STYLECRAFTUS

MADE IN CHINA

Model: SCAZFF