



Instruction Manual

LIGHTWEIGHT FOLDABLE DRYER WITH POWERFUL MOTOR



MODEL: SC103B

INSTRUCTIONS FOR USE:

TECHNICAL DATA:

Voltage: 125V, 60 Hz

Capacity: 1600W

Motor: DC 365



Attention!

IMPORTANT SAFETY INSTRUCTIONS

HOW TO USE:

- Make sure that your hands are completely dry before plugging in the device.
- Plug in and set the switch to the desired position.
- Use the hair dryer carefully as needed to style your hair.
- When finished using, set the speed switch to off (0) and unplug the device.

SWITCH:

0 Off position

❄ Cool air

Low temperature

2 High temperature for rapid drying



NOTICE:

- Before turning on, check that the voltage on the dryer is the same as that in your home.
- Switch off when not in use, even if momentarily.
- If the supply cord is damaged, it must be replaced by the manufacturer or a service agent in order to avoid a hazard.
- Never submerge or wet the dryer.
- Ensure that the air inputs and outputs are not blocked.
- **WARNING** - Do not use in a bathroom, near bathtubs, showers, basins or other vessels containing water as the proximity of water presents a hazard even when the hairdryer is switched off.
- This appliance can't be used by children and persons with reduced physical, sensory or mental capabilities.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is intended to be used indoors.

CLEANING:

WARNING - Always unplug your appliance before cleaning.

- Your hair dryer requires very little attention. Clean it together with its accessories by using a slightly damp cloth to remove hair or impurities trapped in the rear grid.
- Never clean your appliance with alcohol.
- Never immerse your appliance or its accessories in water.
- Carefully dry all parts you have just cleaned.

WARRANTY INFORMATION

One (1) YEAR LIMITED WARRANTY: USA AND CANADA

STYLECRAFT LLC. (STYLECRAFT) ("we", "us", or "our") warrants product against defects in materials and workmanship for one (1) year from original purchase date ("Warranty Period"). If you cannot prove original purchase date, Warranty Period runs one (1) year from date of product manufacture. If we receive a valid claim, we will repair or replace with product of equal or greater value at our option.

This Warranty does not cover normal wear and tear such as shorts in the power supply cord or plug, or excessive product build-up or damage due to accident, misuse or abuse such as: dropping (broken housing, broken hinges, rattling noise, vibration, etc.), wrong voltage supply, or neglect in safety precautions; or tampering such as repair or attempted repair by unauthorized person, or use of unauthorized attachments. What to do if you have a claim: If the product fails to operate properly under normal use because of a covered defect; return merchandise authorization and within the Warranty Period, please call (888) 864-6409 for further directions on how to send back to us for repair or replacement (postage and handling charges of \$14.95 will apply). Please properly package product against possible damage. Please be sure to include the RMA number you received from our Customer Experience Team. We are not responsible for products lost or damaged in transit.

IMPORTANT: Do not send cash. Further instructions and return address will be provided for the claim process when you call our Customer Experience Team at (888) 864-6409. Items sent back without a return authorization will be refused and returned at the customer's expense.

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES AND CONDITIONS SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. WE SPECIFICALLY DISCLAIM ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF WE CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN TO THE EXTENT WE CANNOT DISCLAIM WARRANTIES, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL EXPIRE ON EXPIRATION OF THE WARRANTY PERIOD. WE EXPRESSLY EXCLUDE, AND WE WILL NOT PAY, CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OF ANY WARRANTY, AND WE ASSUME NO RESPONSIBILITIES FOR YOUR LOSS OF USE OF THE PRODUCT, OR FOR ANY OTHER INCONVENIENCE OR CONSEQUENTIAL EXPENSE. YOUR LEGAL RIGHTS: Some countries, states, provinces and/or jurisdictions do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

If you have questions regarding warranty, you may reach the Customer Experience Team at (888) 864-6409. STYLECRAFT, LLC.,
1120 S. Rogers Circle Boca Raton, FL 33487.

The Warranty does Not Cover:

- Damage caused by non-compliant use, improper treatment or breakage during transport.
- Damage caused by non-compliance with the user instructions.
- Damage caused by use of the appliance with incorrect mains voltage.
- Appliances that mount accessories from other manufacturers.
- Defects that do not affect the value of the ability to use the product.
- Parts subject to normal wear.

**CORRECT DISPOSAL OF THIS PRODUCT**

This marking indicates that this product should not be disposed with other household wastes. To prevent R possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems. They can take this product for environmental safe recycling.