






S | C

uno 2.0

PROFESSIONAL LITHIUM-ION SINGLE FOIL SHAVER



     USER MANUAL | WARRANTY

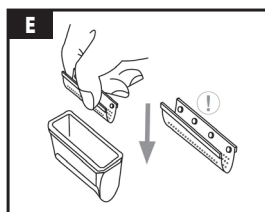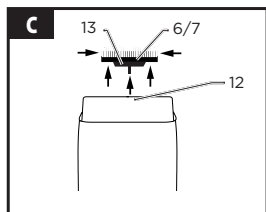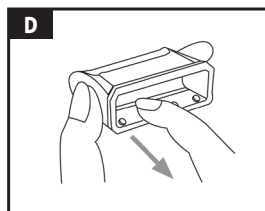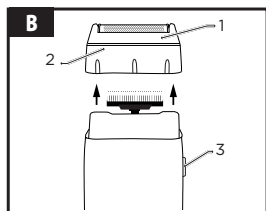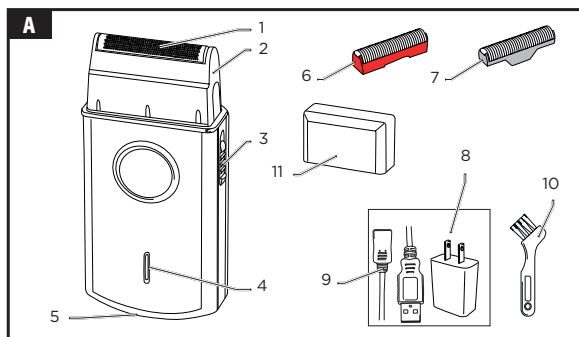

- 1 -Foil
- 2 - Head
- 3 - ON-OFF switch
- 4 - LED
- 5 - Power supply cable connection (not visible in the image)
- 6 - Forged blade

- 7 - Crunchy blade
- 8 - Feeder with USB connection
- 9 - Power supply/charge cable
- 10 - Brush
- 11 - Protective cap
- 12 -Central pin support
- 13 -Central pin

PROFESSIONAL RAZOR

For use on short or previously cut hair only.
Not suited for long hair

EXPLANATION OF SYMBOLS



Class III equipment identifies equipment meeting safety requirements specified for class III according to IEC 61140 and applies to the protection of persons and animals against electric shock. Class III appliances do not require earthing.



This symbol indicates that the product meets requirements for new directives introduced so as to protect the environment and must be disposed of appropriately at the end of its life cycle. For more information on areas dedicated to waste disposal contact local authorities.



General Warning:
This symbol indicates potential risk and is used as reminder to use safety precautions.



IMPORTANT SAFETY INSTRUCTIONS

WARNING!

Battery liquid can cause blindness, skin irritation, inflammation or injury. If the battery leaks fluid, do not touch it with bare hands. In case of contact with eyes do not rub, wash immediately with clean water and consult a physician. In case of exposure, remove contacted clothes immediately, wash any exposed skin with water and consult a physician. To avoid damage and dangers due to improper use, carefully follow these instructions and store in a safe place. If the product is handed over to a third party, provide this instruction booklet.

- Do not use this product with a different power adapter from the one supplied and do not use the enclosed power adapter to charge other products.
- Contact the manufacturer for instructions on how to change the battery.
- Do not use rechargeable batteries with other products.
- Do not incinerate or throw in fire.
- Do not let the positive and negative terminals of the battery come into contact with each other or metal objects.
- Avoid exposure to high temperatures. Keep battery out of direct sunlight and away from heat sources.



ELECTRICAL SAFETY PRECAUTIONS

Adhere to the following instructions to minimize risk of injury while handling electrical equipment:

- Do not expose product to elements including rain, sun and extreme wind.
- Unplug when not in use.
- Do not pull electrical cord when removing plug from the socket.
- Home electrical circuit integration of a fault current protection device with a nominal trigger current no greater than 30mA provides additional protection. Contact your electrician for more information.
- This device is manufactured in accordance with applicable regulations.
- Wrapping USB cable around the power adapter may cause damage.
- In case of a damaged power cord, do not use or attempt to repair and contact customer service at (888) 864-6409.

UNPACKING AND INSPECTING THE PRODUCT

- DANGER: KEEP OUT OF REACH OF CHILDREN!
Packaging materials contain plastic ingredients that can cause suffocation.
- Remove packaging and ensure all accessories (fig. A) are included.
- Inspect the product and accessories for visible signs of damage.
- If damaged or missing parts, contact customer service at (888) 864-6409 for help.



GENERAL USE WARNINGS

- KEEP OUT OF REACH OF CHILDREN: Intended for adult use only.
- Refer to product packaging or affixed data plate for technical specifications.
- Intended for use on human hair only.
Use with wigs, animal fur or any other material voids the manufacturer's warranty.
- It is normal for the device to get hot during use and while charging.
- Designed for use at temperatures between 41°F and 104°F.

- Do not insert any foreign objects into the device.
- Those with physical, sensory and/or mental disabilities should be cautioned of dangers before use.
- In the event of damage from a fall, significant impact or other malfunction contact customer service at (888) 864-6409.



CHARGING INSTRUCTIONS

- 1) Charge completely prior to first use and when the LED indicator is red.
- 2) Make sure the switch (3) is in the “OFF” position.
- 3) Connect the fast-charging adapter (8) to the wall's electrical socket and insert the USB charging cable (9).
- 4) Connect the USB cable (9) to the charging port (5).
- 5) When charging is complete the LED indicator will turn green.
- 6) Disconnect the charging cable (9) from the shaver when finished.

Note: This device can be operated cordless by battery power or while connected to the power supply.



INSTRUCTIONS FOR USE

- To avoid risk of injury, do not use if the foil head (1), head enclosure (2) or blades (6/7) are damaged.
- Avoid use on injured skin and imperfections such as bumps, blemishes, etc.
- Never use without the head enclosure (2) in place.
- Do not use on wet hair.
- Remove protective cap (11) and make sure the shaver is clean and dry before use.
- Turn on by moving the switch (3) up to the “ON” position.
- Gently stretch skin and shave against hair growth.
- When finished using, power off by moving the switch (3) down to the “OFF” position.
- Store in a cool, dry place after use.

MAINTENANCE AND CLEANING

- To avoid injury, maintenance should only be performed by a skilled professional.
- Cleaning is recommended after each use.
- Always disconnect the power cord from electrical socket before cleaning.
- To avoid electric shock, do not immerse in water to clean.

- Exterior can be cleaned by wiping with a clean, soft, slightly damp cloth.
- Do not clean with abrasive solutions or concentrated detergents.
- Make sure all parts are completely dry before using.
- In case of malfunction or damage, do not attempt to disassemble and contact customer service at (888) 864-6409.

To clean blades and interior of the head enclosure (2), refer to figure B and the following instructions:

- 1) Take care not to drop while handling as the foil head and head enclosure are delicate and prone to damage.
- 2) Make sure the device is powered “OFF” and disconnected from power source before cleaning.
- 3) Lift the head enclosure with force to remove.
- 4) To remove the foil head, firmly grasp and pull up.
- 5) Clean by blowing on it gently or with soap and water.
- 6) Make sure foil is completely dry before inserting into the head enclosure.

For instructions on blade replacement refer to figure C and the following instructions:

- 1) Make sure the device is powered “OFF” and disconnected from power source before changing blades.

2) Remove foil head and head enclosure (refer to fig. B and cleaning instructions above for details).

3) Gently grasp the blade (6, 7) and pull up to release from the central pin support (12).

4) Grasp the new blade from both sides and insert it into the central pin (13).

5) Align with razor body and press firmly until blade snaps into place.

6) Replace foil head and head enclosure.

DISPOSAL

- Packaging is made from recycled materials.
- Separate parts according to type and dispose in accordance with applicable environmental protection regulations.
- Remove lithium battery prior to disposal.
- Do not dispose battery or power adapter with domestic waste; refer to important safety instructions above for proper handling.
- Batteries and power adapters are collected free of charge at local collection points (refer to your local council) or by any battery retailer.
- The end user is responsible for proper disposal at a special waste collection center.
- Do not reconnect the appliance to the power supply after the batteries have been removed.

WARRANTY

Warranty Period: ONE (1) YEAR LIMITED WARRANTY
(USA & CANADA)

StyleCraft LLC (Stylecraft “we”, “us” or “our”) warrants this product against defects in materials and workmanship for one (1) year from original purchase date (“Warranty Period”). If the original proof of purchase is not available, the “Warranty Period” expires one (1) year from the date of manufacture. If a claim is received and approved during the “Warranty Period”, we will repair or replace the damaged item with a product of equal or greater value at our discretion. This warranty does not cover normal wear and tear, shorts in the power supply/cord, damage from excessive product build-up, damage due to accident, wrong voltage supply, neglect of safety precautions, tampering such as attempted repair by unauthorized person(s), damage from use of unauthorized attachments or damage to the housing (broken hinges, rattling noise, vibration, etc.) due to misuse. In case the product fails to operate properly under normal use due to a covered defect, file a claim using the following instructions:

(1) If within 30 days from original purchase date, simply return to point of purchase with the receipt for a replacement at no charge or (2) If after 30 days and within the “Warranty Period”, contact customer service at (888) 864-6409 for further directions on how to return for repair or replacement. A postage and handling charge of \$14.95 will apply. Please ensure proper packaging to prevent damage. We are not responsible for loss or damage during transit.

WARRANTY

IMPORTANT: Do not send cash. Be sure to include your RMA number, a note describing the problem and original proof of purchase. Further instructions on the claim process and return shipping address will be provided by customer service when filing the claim. Items must never be returned without a return merchandise authorization. Items returned without an RMA will be declined and returned at the customers expense. Please contact customer service for a return merchandise authorization number (RMA).

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS WARRANTY, REMEDIES AND CONDITIONS SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS WHETHER ORAL, WRITTEN, EXPRESSED OR IMPLIED. WE SPECIFICALLY DISCLAIM ANY AND ALL IMPLIED WARRANTIES INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

IF WE CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN TO THE EXTENT WE CANNOT DISCLAIM WARRANTIES ALL SUCH WARRANTIES INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL EXPIRE ON EXPIRATION OF THE "WARRANTY PERIOD".

WE EXPRESSLY EXCLUDE AND WE WILL NOT PAY CONSEQUENTIAL OR INCIDENTAL DAMAGES IN THE EVENT OF ANY BREACH OF THESE TERMS. FURTHERMORE, WE ASSUME NO RESPONSIBILITY FOR LOSS OF USE OF THE PRODUCT, CONSEQUENTIAL EXPENSE OR ANY OTHER INCONVENIENCE.

YOUR LEGAL RIGHTS: Some countries, states, provinces and/or jurisdictions do not allow limitations

WARRANTY

on implied warranties and/or do not allow the exclusion of incidental or consequential damages. Therefore, the above limitations and exclusions may not apply. For questions regarding the warranty, contact customer service at (888) 864-6409. We strive to always offer high quality, reliable products with advanced technology and reserve the right to make changes and/or replace parts at any time without prior notice at our discretion.

WARRANTY - GARANTÍA

Model - Modelo

Serial No. - N.º de serie

Date of purchase - Fecha de compra

--	--	--	--	--	--	--

Dealer stamp - Sello del vendedor

--

Proof is the date shown on the receipt/invoice.
Da fe la fecha indicada en el comprobante/factura.

STYLECRAFT®

STYLECRAFT®

Designed and imported by StyleCraft® LLC North America
Boca Raton, FL 33487

STYLECRAFT® IS A TRADEMARK OF STYLECRAFT, LLC
COPYRIGHT ©2023 STYLECRAFT, LLC

Made in China / Hecho en China / Fabriqué en Chine








Scan to learn more about StyleCraft.

WWW.STYLECRAFTUS.COM | FOLLOW US:

  @STYLECRAFTPRO

      @GAMMASTYLECRAFTPRO



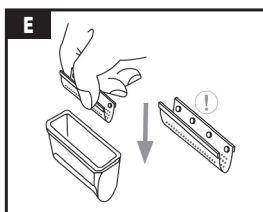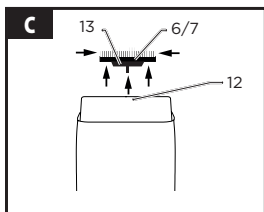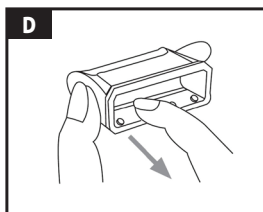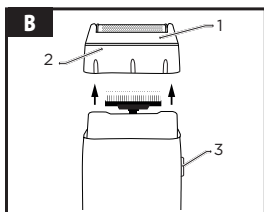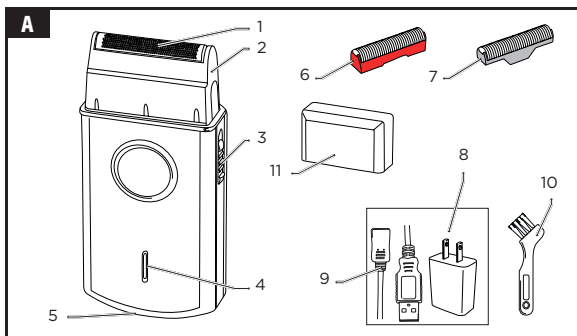

- 1 - Foil
- 2 - Head
- 3 - ON-OFF switch
- 4 - LED
- 5 - Power supply cable connection (not visible in the image)
- 6 - Forged blade

- 7 - Crunchy blade
- 8 - Feeder with USB connection
- 9 - Power supply/charge cable
- 10 - Brush
- 11 - Protective cap
- 12 - Central pin support
- 13 - Central pin

MAQUINILLA PROFESIONAL

Para uso en cabello corto o previamente cortado.
No apto para cabello largo

EXPLICACIÓN DE LOS SÍMBOLOS



El equipo de clase III identifica el equipo Cumplimiento de los requisitos de seguridad especificados para clase III según IEC 61140 y aplica a la protección de personas y animales contra descargas eléctricas. Aparatos de clase III. No requieren puesta a tierra.



No requieren puesta a tierra.
Este símbolo indica que el producto cumple Requisitos para la introducción de nuevas directivas a fin de proteger el medio ambiente y debe ser eliminado adecuadamente al final de su vida útil ciclo. Para más información sobre áreas dedicadas Para la eliminación de residuos, póngase en contacto con las autoridades locales.



Advertencia general:
Este símbolo indica un riesgo potencial y es Usó un recordatorio para usar precauciones de seguridad.